

WELL CHLORINATION INSTRUCTIONS

1

Remove the well cap, the vent pipe or plug if the well is equipped with a sanitary well seal.



2

Pour one gallon of household bleach (5.25% chlorine) directly into the well along the side walls of the well casing.




3

Connect a hose to a house spigot and run water directly into the well until chlorine odor is present in the water. Run the water this way for at least 15 minutes.



4

Shut off water supply to hose and open each water fixture in the house. Let water run through each fixture until chlorine odor is present (Approximately 1 minute each). Cold water side only.

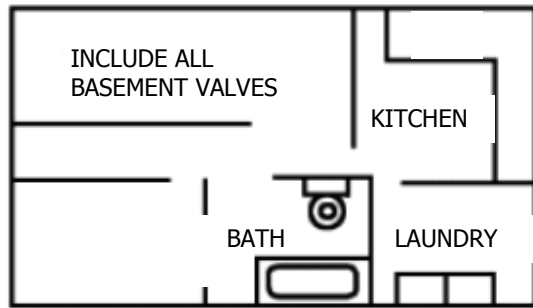


5

Close all valves and pour another gallon of bleach into the well casing along side walls of the well casing. Recap the well or replace the vent pipe or plug. Leave all valves closed for 18-24 hours. (Toilets may be flushed as needed).

6

Open the hose spigot and discharge water to the ground surface or drainage ditch until chlorine smell disappears. Then open every household fixture and let water run until the chlorine odor is gone (Approximately 1 minute each).

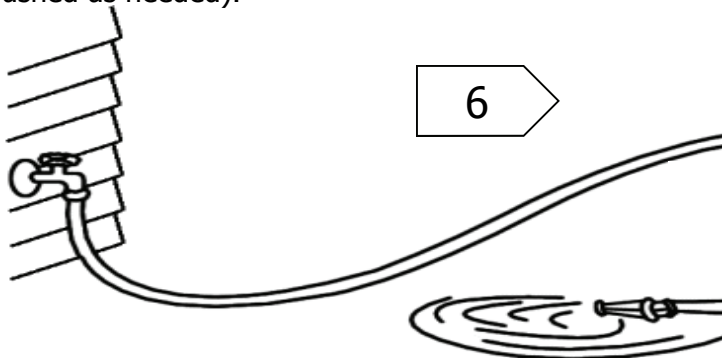

7



The well should now be properly disinfected. Contact Benchmark Environmental Labs for a test/retest of your water. (614) 267-4588